PMP84 User Manual

Date last modified: 12/12/2012


2.7" Folded width


Music Player In the box Location of controls







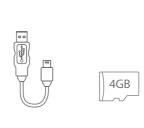



Headphones





MicroSD Card


Micro SD Card Slot


Mini USB Port

- **③[►II]** Play/Pause/Standby (HOLD) **④[₩]** Previous / Rewind (HOLD)
- **⑤[▶]** Next / Fast forward
- **6**[+] Volume up [-] Volume down
- 8 Head phone Jack
- On/Off Switch
- Indicator Light

Charging the battery

- 1. Connect the small end of the supplied USB cable to the mini USB port on the side of the player.
- 2. Connect the large end of the supplied USB cable to an available port on your computer.
 - 4. During charging, the indicator light illuminates solid, when the player is fully charged, the indicator light will flash.



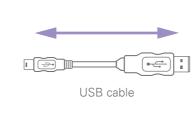




3. Charge the battery between 3-5 hours.

Do not charge for more than 8 hours.

◆Polaroid

Be sure to fully charge the player before using it for the first time.

Basic operation

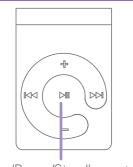

Play/Pause/Standby Indicator light (HOLD) On/Off Switch

Turning on / off


- 1. To turn on the player, slide the On/Off switch left to the On position, the indicator light will flash, and music playback will
- 2. To turn off the player, slide the On/Off switch right to the Off position, music playback will stop, and the indicator light will shut off.

Standby

- 1. When the player is On, long press Play/Pause/Standby button[►II],the indicator light will flash, and player will remain on Standby.
- 2. To resume Playback, press the Play/Pause/Standby button[►II], the indicator light will begin to flash, and music playback will resume.

Playing music


- 1. To play music press the Play/Pause/Standby button [►], the Indicator light will flash to show that the player is on and playing music.
- 2. To pause music, press the Play/Pause/Standby button [►], the Indicator light will stay solid to show that the player is on and paused.

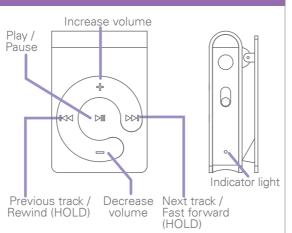

- [►II] Play / Pause music
- [►] Previous track / Rewind (HOLD)
- [▶] Next track / Fast forward (HOLD)
- [+] Increase volume
- [] Decrease volume

When music is playing, the LED will stay solid
 When music is paused the LED will flash



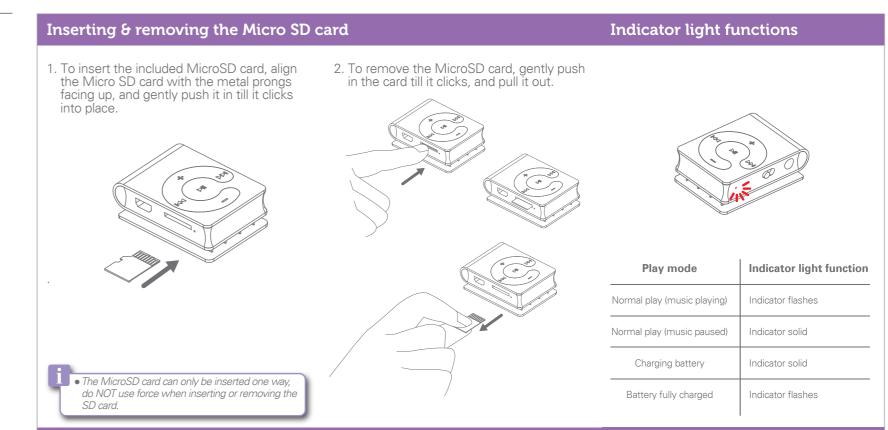




1. Find music files on your computer. (Supported file formats: MP3, WMA)

2. Connect the MP3 Player to your computer, and locate "MicroSD"

3. Drag and drop or copy and paste the files into the player as shown below:

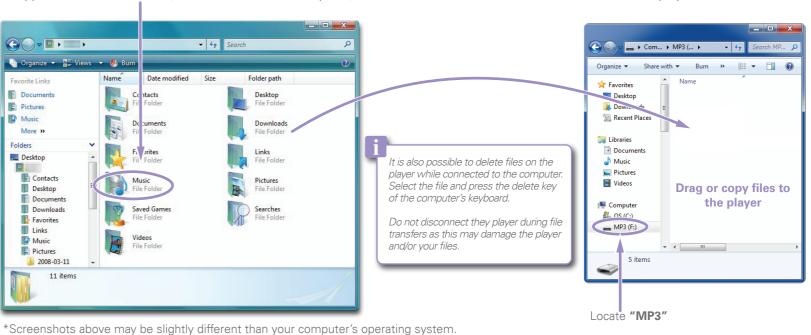

Legal information

FCC Part 15: lies with Part 15 of the FCC Rules. Operation is subject

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including cause undesired operation.

Warning: Changes or modifications to this equipment not express approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to
- Do not attempt to repair or modify this equipment.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local

authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

· Provide proof of the date of purchase within the package (Dated bill of Sale).

Prepay all shipping costs to the authorized service center, and remember to insure your return.

Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package. receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

> Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

You may also go to HYPERLINK "http://www.polaroid.com"

Limited Warranty

TO OBTAIN WARRANTY SERVICE:

www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform

properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

Describe the defect or reason you are returning the product.

The shipping address of the authorized service center is:

AIT, Inc. ATTN: Customer Service (2nd Floor) 14-C 53rd Street Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST)

Polaroid, Polaroid & Pixel, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support. © 2012 All Rights Reserved

FRONT

